 





# Rowenta

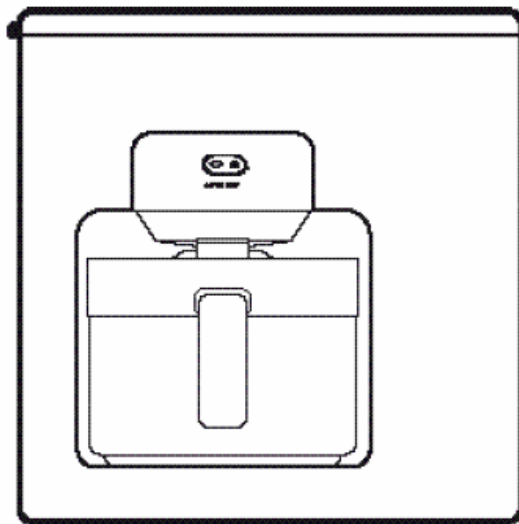 


JASPER MARRISON

Instructions for use

		
12/18	10	16
10/15	8	15
8/12	7	13
6/9	5	10
4/6	3	7
2/3	2	4

G

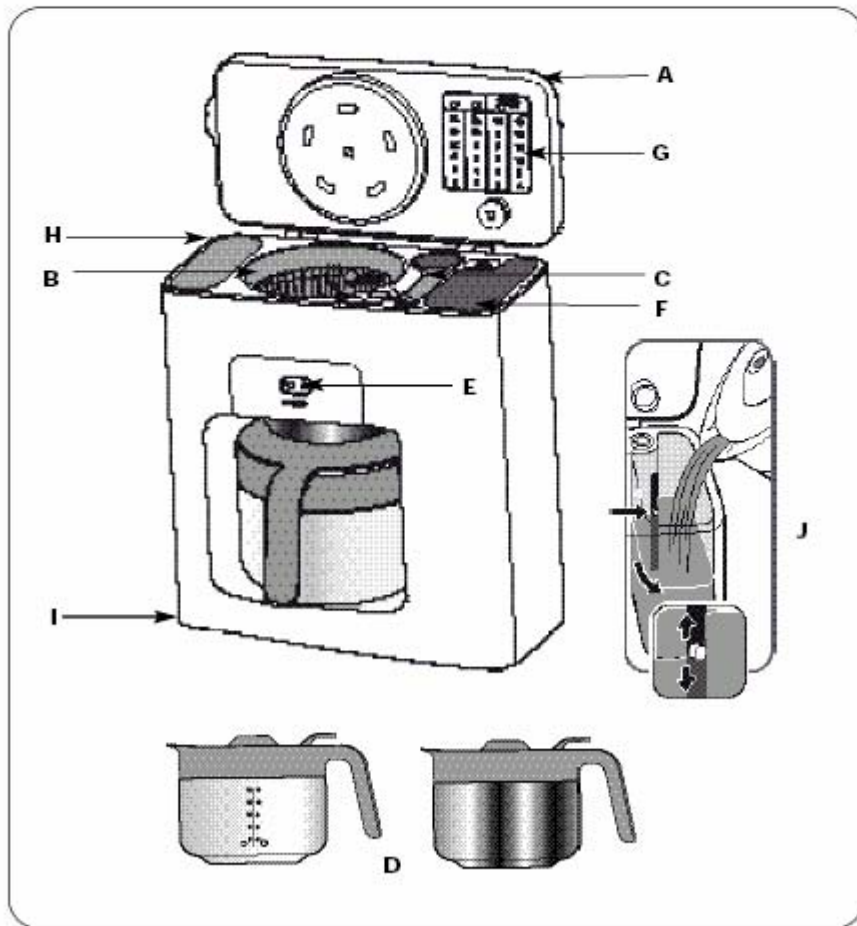

<b>A</b> Couvercle du réservoir	<b>F</b> Réservoir	<b>F</b>
<b>B</b> Porte-filtre amovible avec système anti-goutte	<b>G</b> Guide de dosage du café	
<b>C</b> Dosette	<b>H</b> Rangement des filtres papier 1x4	
<b>D</b> Pot inox isotherme ou verseuse verre	<b>I</b> Range cordon	
<b>E</b> Interrupteur lumineux marche / arrêt	<b>J</b> Indicateur du niveau d'eau	





<b>A</b> Tank lid	<b>F</b> Tank	<b>GB</b>
<b>B</b> Removable filter-holder with anti-drip system	<b>G</b> Coffee dosing guide	
<b>C</b> Measuring spoon	<b>H</b> Filter paper storage 1x4	
<b>D</b> Stainless steel heat-insulated jug or glass pouring jug	<b>I</b> Cord compartment	
<b>E</b> Illuminated ON/OFF switch	<b>J</b> Water level indicator	

<b>A</b> Deksel van het reservoir	<b>F</b> Waterreservoir	<b>NL</b>
<b>B</b> Uitneembaar zwenkfilter met druppelstop	<b>G</b> Doseertabel voor koffie	
<b>C</b> Doseerschepje	<b>H</b> Opbergvak voor papieren filters 1 x 4	
<b>D</b> Roestvrijstalen thermokan of glaskan	<b>I</b> Snoeropberging	
<b>E</b> Controlelampje	<b>J</b> Waterindicator	

<b>A</b> Deckel des Wassertanks	<b>F</b> Wassertank	<b>D</b>
<b>B</b> Abnehmbarer Filterträger mit Antitropfsystem	<b>G</b> Dosiertabelle	
<b>C</b> Dosierlöffel	<b>H</b> Fach für Papierfilter 1x4	
<b>D</b> Thermoskanne aus Edelstahl oder Glaskanne	<b>I</b> Kabelaufwicklung	
<b>E</b> Schalter mit Kontrollleuchte Ein/Aus	<b>J</b> Wasserstandsanzeige	

<b>A</b> Tapa del depósito	<b>F</b> Depósito	<b>E</b>
<b>B</b> Portafiltro extraíble con sistema antigoteo	<b>G</b> Guía de dosificación del café	
<b>C</b> Cuchara dosificadora	<b>H</b> Alojamiento de los filtros papel 1x4	
<b>D</b> Jarra de acero inoxidable isotermita o de vidrio	<b>I</b> Alojamiento del cable	
<b>E</b> Interruptor luminoso funcionamiento / parada	<b>J</b> Indicador luminoso del nivel de agua	

<b>A</b> Coperchio del serbatoio	<b>F</b> Serbatoio dell'acqua	<b>I</b>
<b>B</b> Portafiltro estraibile con sistema salvagoccia	<b>G</b> Guida di dosaggio del caffè	
<b>C</b> Dosatore	<b>H</b> Vano portafiltri di carta 1x4	
<b>D</b> Recipiente isotermitico in acciaio inossidabile o bricco di vetro	<b>I</b> Avvolgicavo	
<b>E</b> Interruttore luminoso On/Off	<b>J</b> Indicatore del livello dell'acqua	

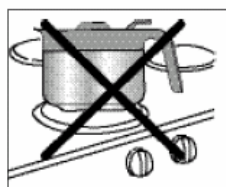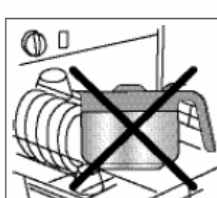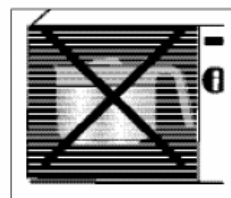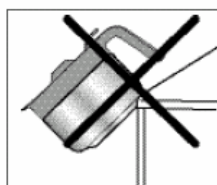    

## Safety instructions

- Check that the mains voltage corresponds to that shown on your appliance's rating plate.
- An electrical appliance is not a toy and should be kept out of reach of children.
- A household appliance must not be used if its power cord shows visible signs of damage, if the appliance has been dropped or if it leaks. In such cases, send the coffee-maker to a Rowenta authorised Service Centre (see list of addresses attached).
- Place the appliance on a stable, flat, heat-resistant surface away from water splashes or other heat sources.
- Do not place or leave the cord to trail on, sharp edges or hot objects. Use the cord compartment.
- Disconnect the appliance:
  - \* if there is a problem during filtering,
  - \* before each cleaning or maintenance operation, after use.
- Do not pour hot water or other liquid into the water tank.
- Do not open the lid while pouring coffee.
- Do not put your hand on the top of the lid while pouring coffee or just afterwards.
- Do not place the appliance on or use it close to hot surfaces. Do not immerse the appliance.
- Only entrust repairs of household appliances to specialists.
- Repairing an appliance yourself can represent a hazard for the user and negate any guarantee.
- If the power supply cable is damaged, it must be replaced by the manufacturer, its after-sales department or a person with similar qualification to avoid any risk of danger.
- This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- Rowenta will accept no responsibility for any damage to the appliance due to inappropriate use or use that does not comply with the user's handbook.
- At the end of the appliance's lifetime, dispose of it in an appropriate manner.

**HELPLINE:** If you have any problems or queries please call our Customer Relations Team first for expert help and advice on:

**0845 602 1454-UK                      (01) 4751947 - Ireland.**

 
## Before first use

- Run the appliance twice with the maximum quantity of water and no coffee.
- Wait for about 5 minutes between the two circuit rinsing cycles.

## To make coffee immediately:

- Press the switch and the ON light will come on.
- Once the water has run through, the hot plate will keep your coffee hot.
- If you want to stop coffee pouring in before the end of water coming through or cut off the heating element, again press the switch and the light will go off.
- You can use the glass pouring jug in the microwave oven, but first remember to remove the lid.

## Lid positioning

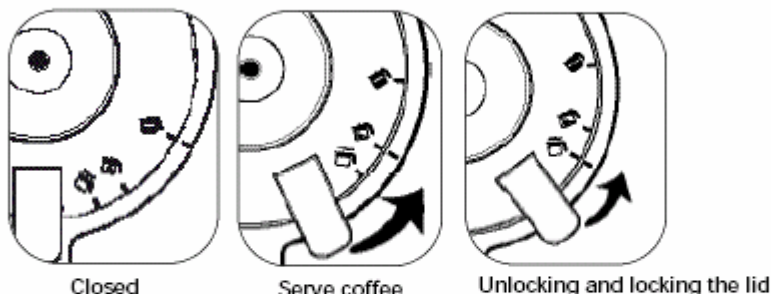

## Auto off

The coffee-maker is equipped with an automatic stop device. It will automatically stop after 2 hours (glass pouring jug) or 15 minutes (heat-insulated jug).

## Stainless steel heat-insulated jug

### Keeping coffee hot:

For best results, pre-heat the jug for a few minutes with hot water and then empty.

### - Keeping cold:

- Cool the jug with cold water and ice cubes, then empty it before filling with a cold drink.
- Do not use for soups or savoury preparations.

## Cleaning and maintenance

- Unplug the coffee-maker and leave to cool.
- You can clean the coffee-maker with a soft, damp cloth.
- Do not immerse the coffee-maker in water.
- The inner filter-holder can be removed. You can wash it and the glass pouring jug **with its lid removed in the dishwasher.**

## Scale removal

- You should remove scale every 2 to 4 months according to the number of times you use the coffee-maker daily and the amount of lime in your water supply.
- If you use de-scaling powder or liquid, follow the manufacturer's instructions.
- For white spirit vinegar:
  - Mix 2 cupfuls of vinegar with 2 cupfuls of water.
  - Pour the cold scale removal solution into the tank, remembering to fit the pouring jug and start the coffee-maker.
- Stop the appliance when half the liquid has run through and leave to rest for 1 hour. Start the coffee-maker up again and let the rest of the solution go through.
- **After scale removal, always rinse the circuit using 2 to 3 cycles of fresh water.**
- **The warranty does not extend to coffee-makers that do not operate or perform badly due to failure to remove scale.**

**For guarantee details see guarantee card enclosed with the appliance.**